



641.774.7499

Monday-Thursday 9am-4pm CST

Email: sales@fatbaggers.com

These instructions describe the procedure to properly install 12” FBI EZ Install Handlebars for 2015-2023 Road Glide Models. You should review these instructions before installing the product as they contain important information regarding your FBI EZ Install Handlebars and Kit. Please keep instructions for future reference.

EZ Install Wired Handlebars- 15-23 Road Glide Models


Items included in this kit:

- EZ Install Wired Handlebars
- These handlebars are pre-installed with a twist grip sensor, can bus wire harness for controls, and 1 pre-installed rope to accommodate heated grips.
- Zip ties
- Recommended Item Sold Separately: Part # 109811 Clutch Adjustor Upgrade for 2021 models, or Part # 109822 Clutch Adjustor Upgrade for 2022-2023 Models.

WARNING: The rider’s safety depends upon the correct installation of this kit. Use the appropriate service manual procedures. If the procedure is not within your capabilities or you do not have the correct tools, contact a dealer to perform the installation. Improper installation of this kit could result in death or serious injury.

Tools & Supplies Needed
T25 Torx
T27 Torx
Tank Cover
3/8 Wrench
Phillips Screwdriver
Small Pick
7/16 Wrench
Side Cutters
12mm Wrench
1/4 Allen
Torque Wrench
Hammer

1. Install center handlebar bolt. Torque to 10 ft. lbs.

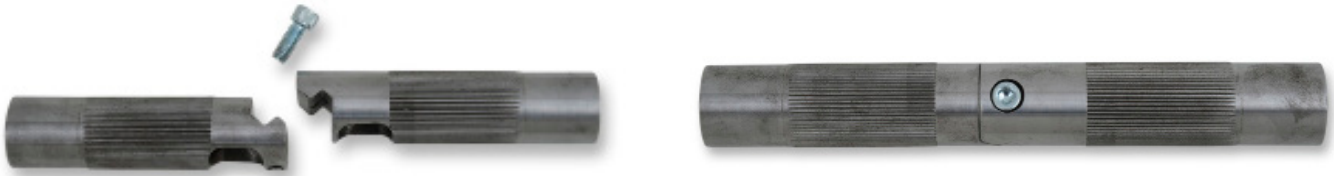


2. Cover fuel tank to protect from dropped parts and to prevent damage to paint.

3. Remove cover under ignition switch by pressing in on the back and pulling up. Be gentle-the small plastic tab breaks easily.

4. Remove gauge cluster by lifting straight up. Unplug the speedometer and two lower plug-ins.

5. Unplug 3 handlebar wires and throttle sensor wire.

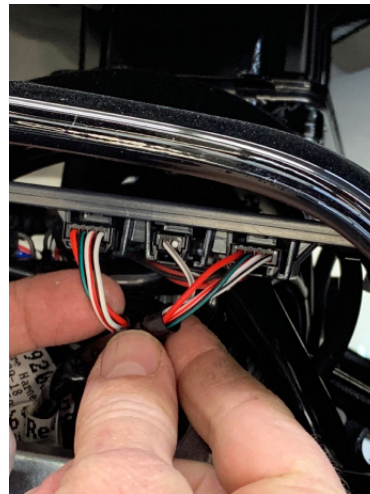

Handlebar Switch Wires

Throttle Sensor Wires


6. Remove master cylinder clamps and master cylinders. Lay master cylinders on top of covered fuel tank.

7. Remove the handlebar clamps by removing the 4 bolts that hold it together.



8. Remove stock handlebars.

9. Remove switch housings and switches from stock handlebars using small pick to release lock.

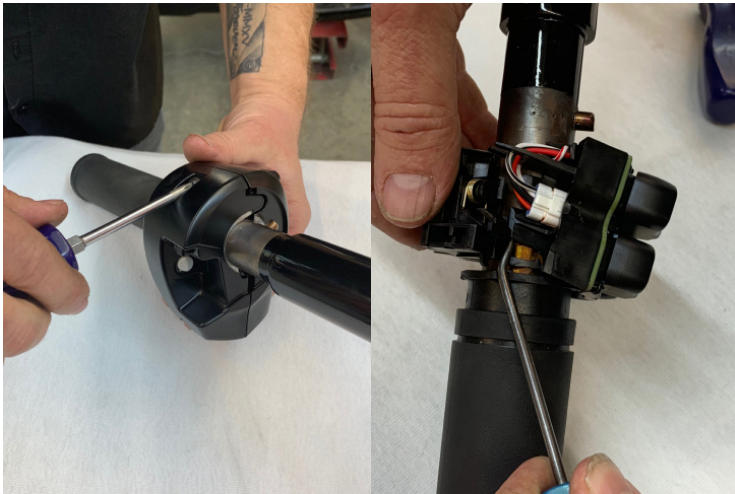

10. Remove grips from stock handlebars.

11. Use a hammer to tap the alignment pin down in bottom center of handlebar clamp. This pin is not needed with FBI's special knurling process which clamps handlebars tighter. Make sure the pin is below the clamp surface.

12. Install handlebars and handlebar clamp. Torque the 4 bolts that clamp the handlebars to 18-22 ft. lbs

13. If using internal wired heated grips, use the supplied rope in the left handlebar to pull the heated grip wires through the bars. If no internal wired heated grips are being used, remove the rope. Install switches, housings, and grips. Make sure the throttle grip turns freely.



14. After the bars are completely installed, check all functions of controls on the handlebars. Check for check engine lights. If check engine lights are on, refer to the owners manual on clearing any check engine light that may be on after changing handlebars. It is normal to have to reset these, and clear them.

15. After the handlebar installation is complete, follow this last step:

- **Set the right handlebar switch to run. Turn ignition switch to on. You will hear the fuel pump cycle on and off. Wait 30 seconds and turn ignition switch to off. Wait for the signals to flash for 30 seconds. Repeat this process 2 more times. This will reset the throttle body and make it in sync with the grip sensor. The bike is now ready to start.**